



Fig.1

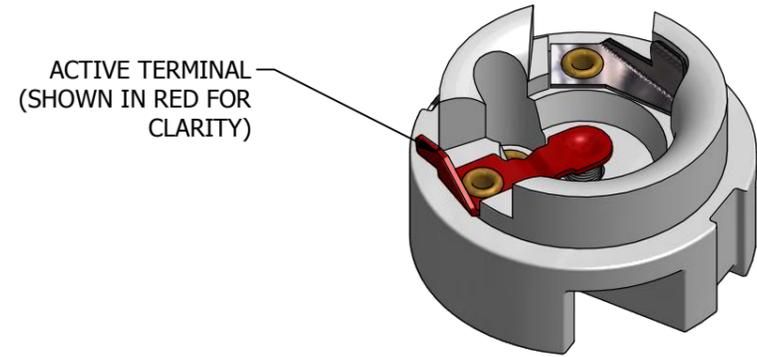

TERMINALS

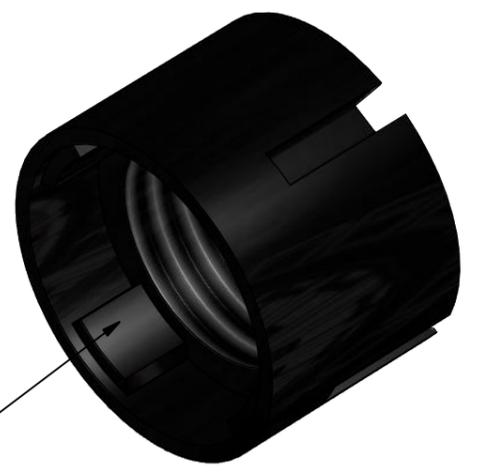

BULB RECEPTACLE



LAMPHOLDER TOP



LAMPHOLDER BODY

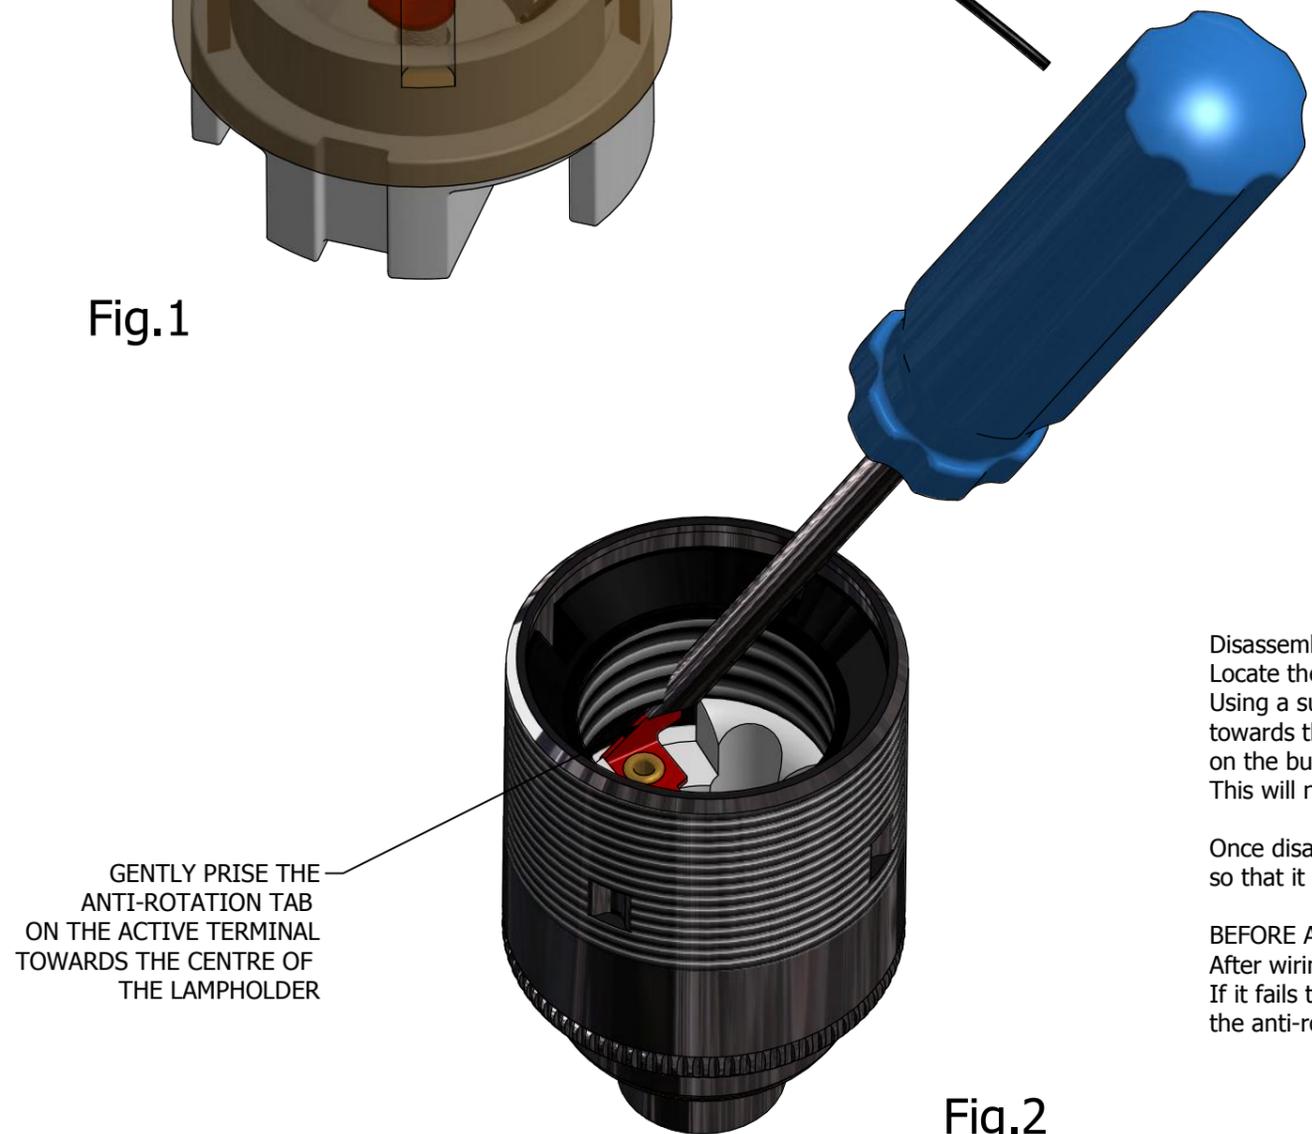


Fig.2

Disassembly instructions.
 Locate the active terminal and its anti-rotation mechanism. (Fig.1)
 Using a suitable screwdriver, gently prize the anti-rotation mechanism towards the centre of the lampholder so as to clear it from the locking teeth on the bulb receptacle. (Fig.2)
 This will now allow the lampholder body to be unscrewed from the lampholder top.

Once disassembled, gently prize the anti-rotation tab back into position using a pair of small pliers so that it engages with the locking teeth on the bulb receptacle.

BEFORE APPLYING POWER
 After wiring and reassembly, test the anti-rotation feature.
 If it fails to lock, remove the lampholder body and bulb receptacle and gently prize the anti-rotation mechanism over to a more aggressive position.

REVISION HISTORY				
REV	DESCRIPTION	DATE	APPROVED	CR
A0	Initial Release	10/08/2014	PG	

USE ONLY FOR JOB NO.		Material		Finish	
UNCONTROLLED DOCUMENT		SCALE: DNS	Designed by DavidG		Checked by PG
		Approved by PG	Date 10/08/2014	Project 760# Series Lamp Holder E27 Disassembly	
		<small>Dimensions in millimetres Limit on untoleranced unmachined dimensions ± 0.2mm No decimal place 1mm 1 decimal place ± 0.3mm 2 decimal places ± 0.1mm General unmachined angular tolerance ±1° Tolerance to be non-cumulative</small>		Revision A0	Sheet 1 / 1

